



<http://www.totalwaterproofingsupplies.com.au>

Cutting & Assembly Instructions


For ease of cutting, we recommend the use of a compound mitre saw fitted with a multi-material cutting blade 80 tooth or more. A hole saw is also recommended to drill the hole for the waste outlet.

1. Cut the bottom tray 2mm shorter than desired length to allow end caps to be fitted.
2. Cut the top grate 1mm shorter than the bottom tray to allow for easy install and removal of top grate.
3. Using a 50mm hole saw, drill out drainage hole in the bottom tray only, at the required position depending on the location of the waste pipe.
4. Insert the end caps into the bottom tray and secure with a bead of silicone on the outside of tray.
5. Place silicone around the lip of the pop waste and secure to the drilled hole on the underside of the bottom tray.



Silicone the top part of the waste outlet, as shown.

Installation to be by a licensed plumber and in accordance with AS/NZS 3500.2.

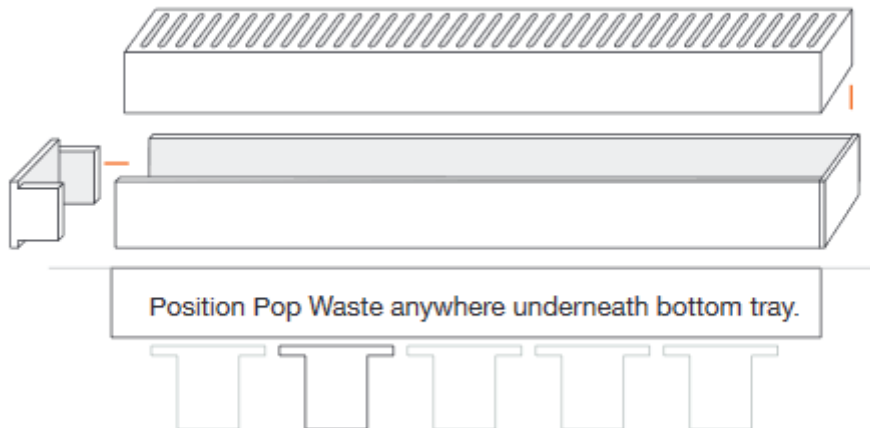

Care & Maintenance

Regular gentle cleaning with soapy water recommended.
Do not use abrasive or harsh chemicals.

Disclaimer: All Lauxes grates and accessories have received WaterMark Certification in accordance with ATS 5200.040.

